PREPARATION FOR INSTALLATION

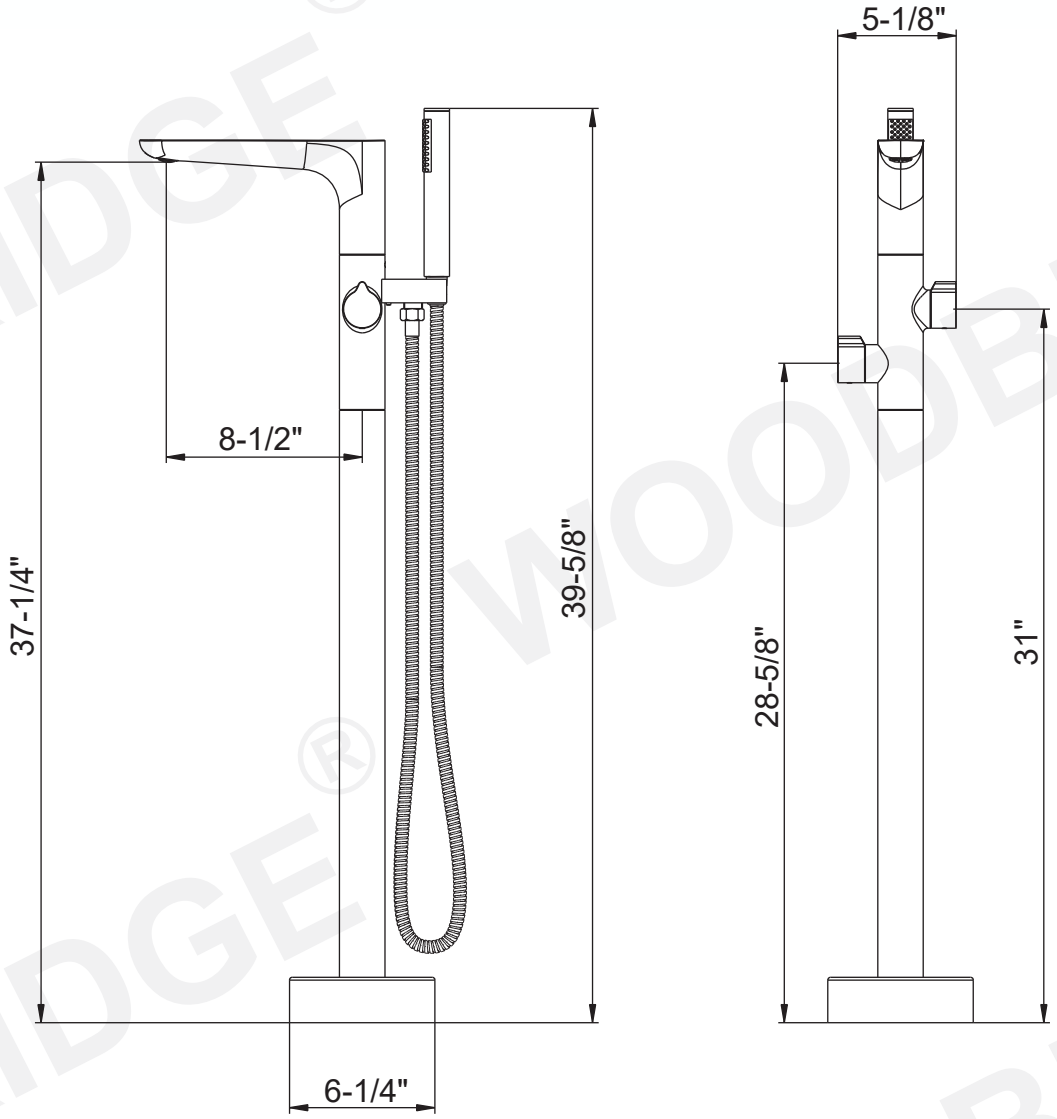

ATTENTION! Dimensions may vary by up to 3/8". It is highly recommended to pull all dimensions of actual model for installation and measuring purposes.

ATTENTION! Measurements in inches are rouned to the nearest 1/8".

TECHNICAL DATA

Max flow rate 3.2 GMP at 80 PSI

Max hand shower flow rate 1.8 GPM AT 80 PSI

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Paci☒ Time)

Or Email: help@woodbridgebath.com

No	Component
1	Spout
2	Aerator
3	O-Ring
4	Plastic Ring
5	Body
6	Handle
7	Plastic Ring
8	Press Hat
9	Cartridge
10	O-Ring
11	Joint
12	O-Ring
13	Spray Head
14	Bracket
15	Screw
16	Flexible Hose
17	Cartridge
18	Handle
19	Screw
20	Canopy
21	Take Over
22	Cover
23	Screw
24	Triangle Plank
25	Flexible Hose

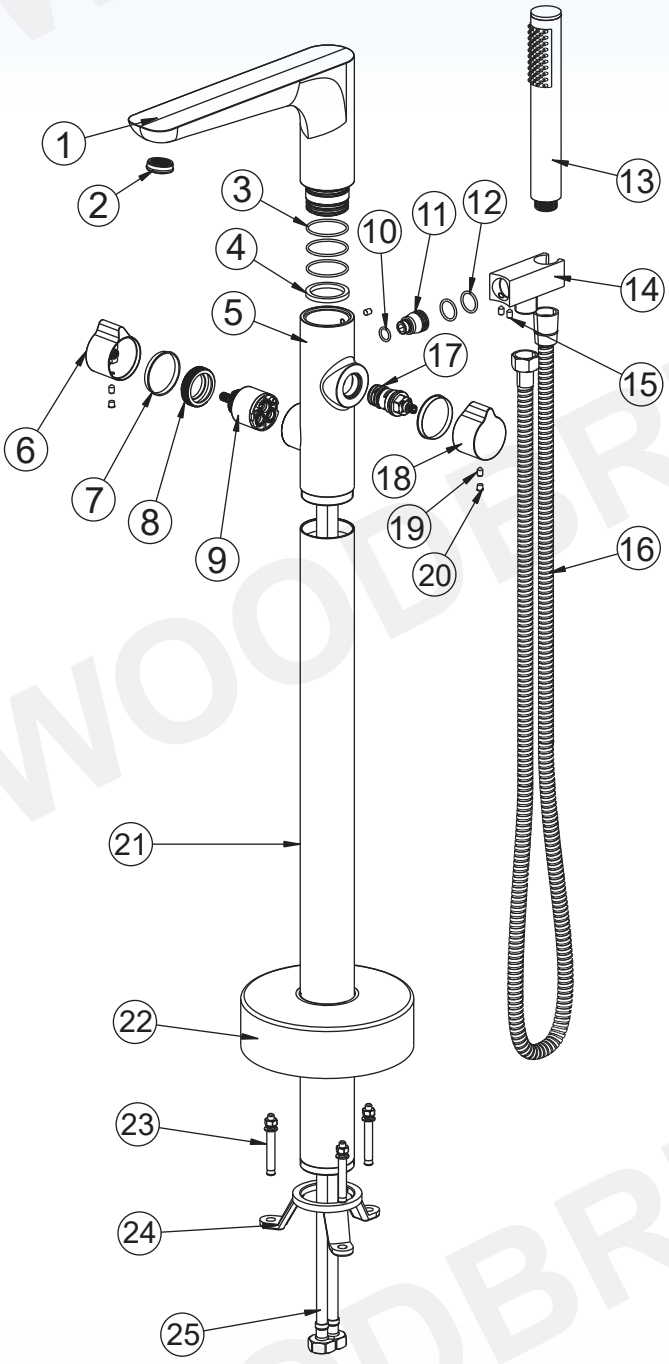

TOOLS REQUIRED FOR INSTALLATION


Basin Wrench


Adjustable Wrench


Teflon Tape


Silicone Sealant


Screwdriver

OTHER TOOLS MAY BE REQUIRED

INSTALLATION INSTRUCTIONS

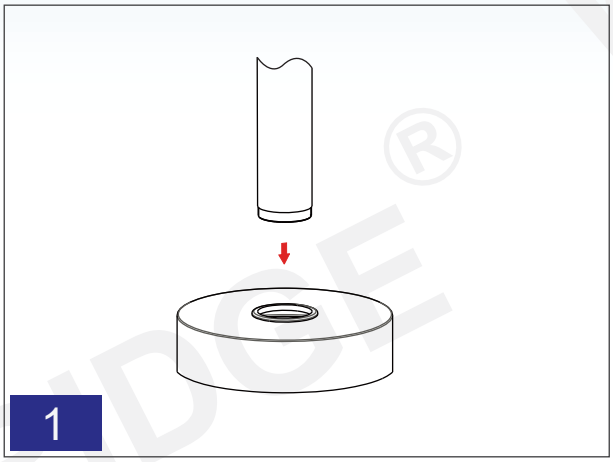

Put the base cover over the pipe.

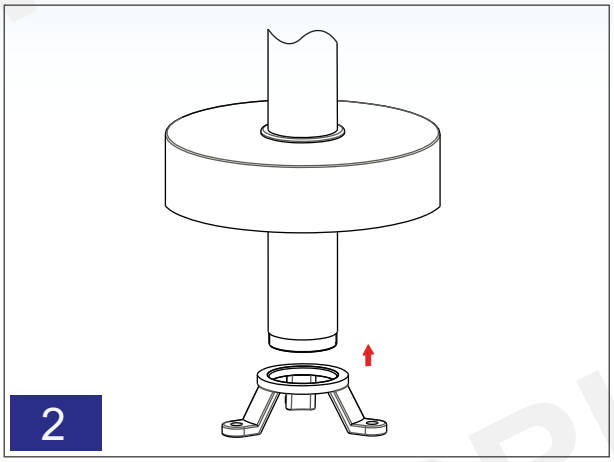

Screw the pipe to the base.

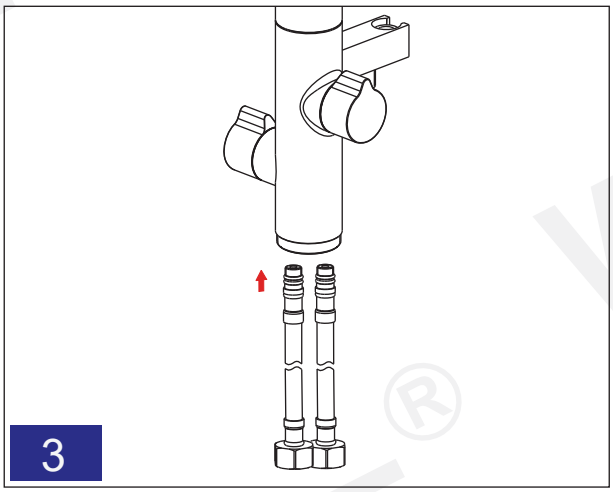

Install the flexible hose now and ensure the flexible hoses are hand tightened into place.(DO NOT USE SPANNER TO TIGHTEN AS IT CAN DAMAGE THE O-RING). The flexible hoses are to be fitted into the correct inlets for hot water and for cold water.

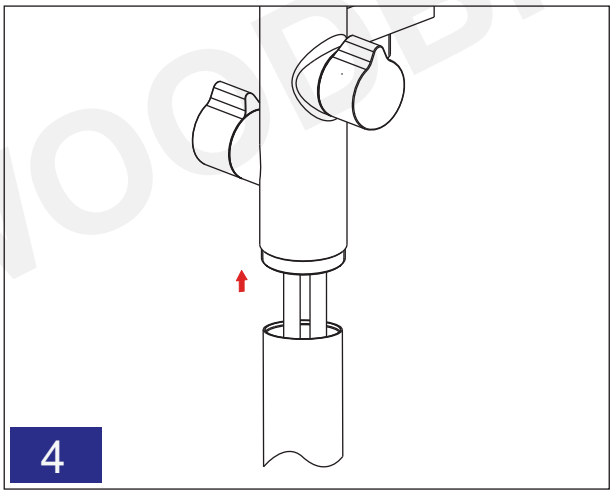

Fix the faucet body to the pipe.

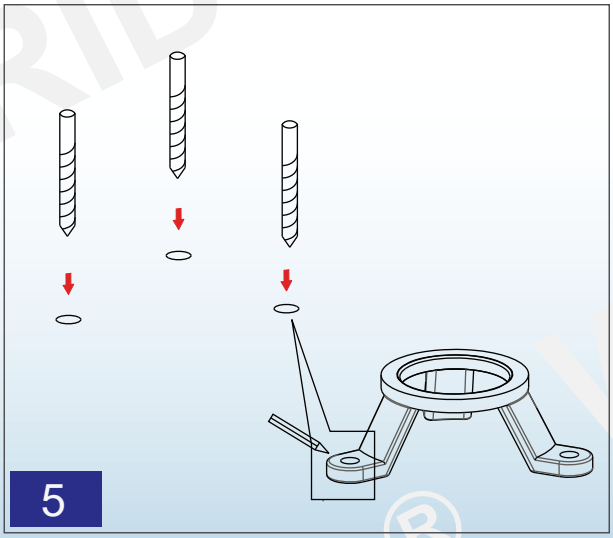

Fix the screw position

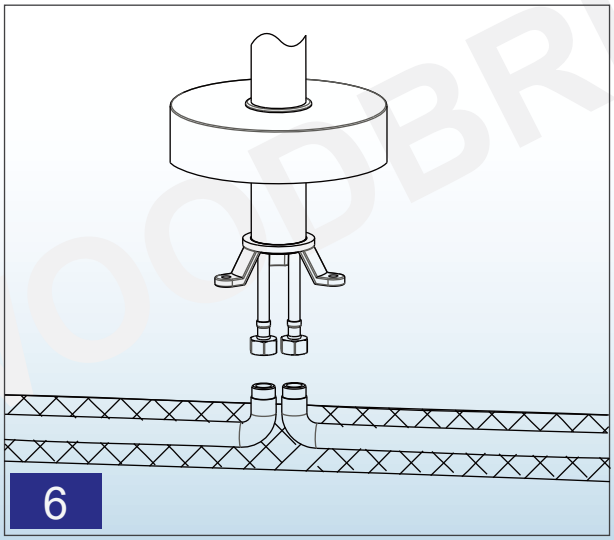

Connect another side of the flexible hose to the water supply pipe. Make sure they are to be fitted into the correct outlets for hot water and cold water.

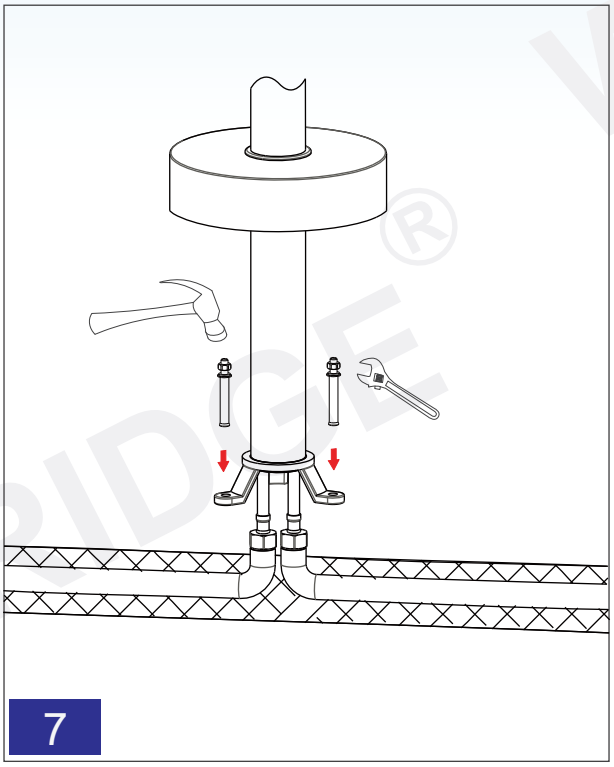

Use the explosion screw to fix the base on the ground. and put the base cover over the base.

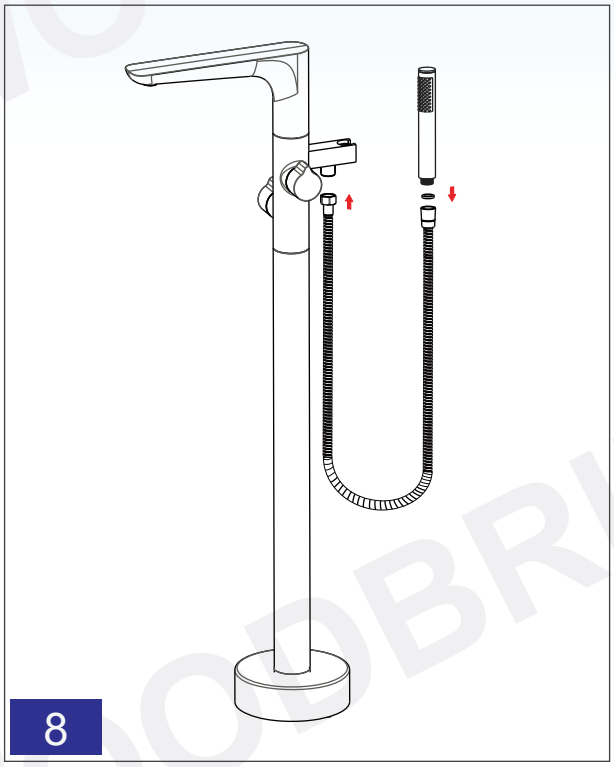

Connect the shower hose and hand shower.

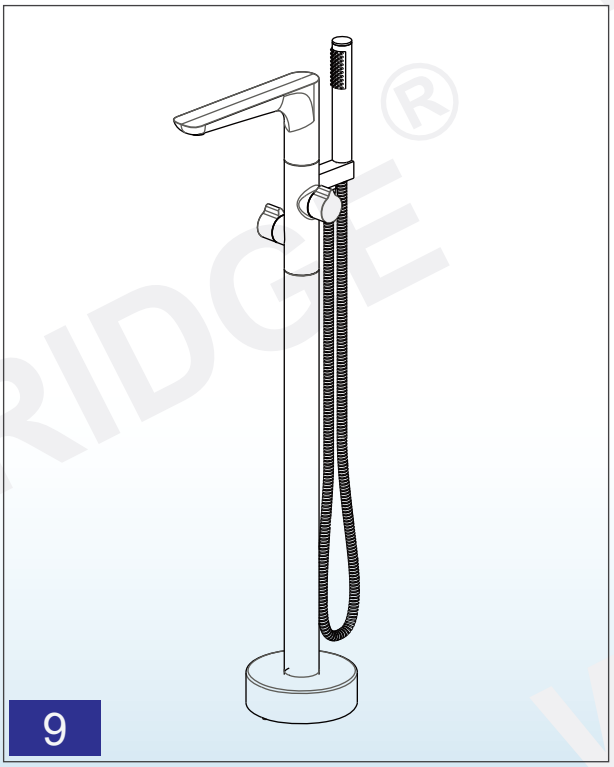

The installation is completed.

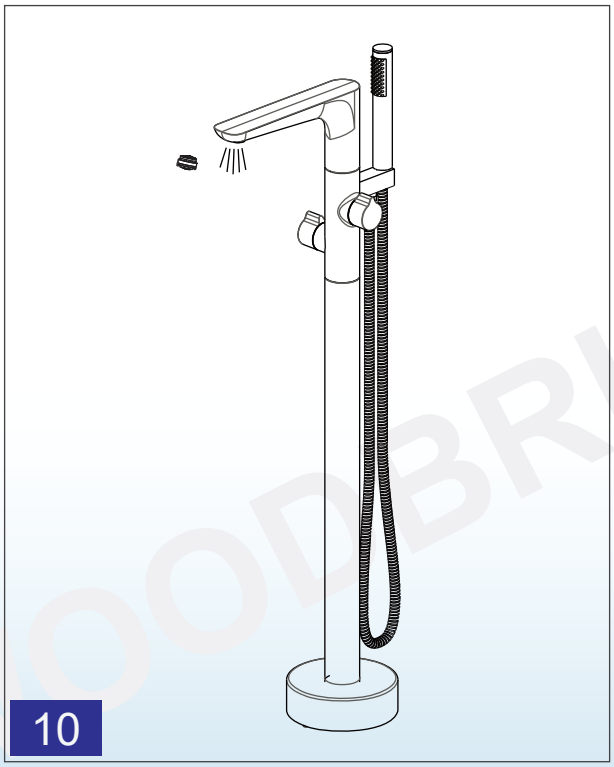

After installation is complete, remove Spray head and rotate handle to the close position. Turn Water Supply Valves on, and check all connections for leak. Flush faucet by running hot and cold water in full position for one minute. Re tighten the Aerator.